




QUICKSLIDE™ FRONT FENDER

Caution: Prior to installation clean the inside of the steer tube and remove all dirt, grease, oil, Vaseline, KY jelly, and other stuff.


1. Locate the largest expander that will fit into the steer tube at the fork crown.
2. Assemble the notched plate, expander, expander cone, nut, and bolt as in **Diagram 2**, and tighten until it just barely fits inside the steer tube.
3. Push the fork mount assembly up into the steer tube and tighten.
4. Engage the slots on the fender with the tracks on the fork mount assembly and slide it on the notches as close to the head tube without touching. **See Diagram 3.**
5. Re-align the fender and retighten the bolt.
6. **For removal:** Grab the front section of the fender with one hand and the head tube with the other and yank forward. It will ratchet the notches and come off.

Important: Regularly check all hardware for tightness. Make darn sure it's all tight and in alignment. Also check for wear on all parts and replace as needed. One last thing, if you put your bike up on top of you car, take the fender off before you hit the highway- you do drive the speed limit! Oh yah, and call your mom.

step 1.

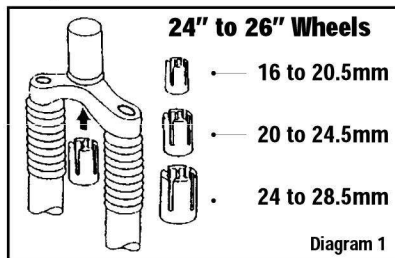

step 2.

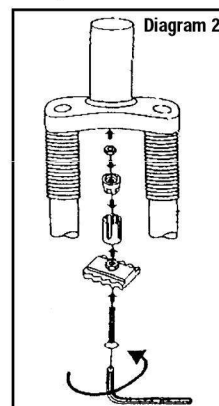

step 3.

